

INSTRUCTIONS FOR USING THE NVH DISHWASHER



So, you want
to use our
super Proton
Washrite
commercial
dishwasher?

It's super because it has 2 superfast washing cycles – 2 minutes (for lightly soiled crockery) or 3 minutes (for moderately soiled), and its washing & drying performances are also super!

It's also very environmentally friendly because it only uses and heats up 3 litres of water for the second and each subsequent wash cycle.

However, it is not the same to operate as a domestic dishwasher:

- There's no need to worry about the detergent and rinse aid as they are dosed automatically and fed directly into the machine.
- There is an external water softener which our Caretaker will only need to service every few weeks, so you won't have to worry about this.
- BUT - emptying the water out of the machine when you have finished is not automatic! You **MUST** follow the instructions – it's not intuitive!
- AND you **MUST** clear out any food debris and clean the bottom of the dishwasher with Cif to remove grease & scum and leave the dishwasher absolutely clean for the next User.

**NOW PLEASE READ THE FOLLOWING INSTRUCTIONS
BEFORE USING THE DISHWASHER!**

Please note!
It will take ~40 minutes for the
dishwasher to heat the water
initially. So, please plan ahead!

Stage 1 – Preparing to use the dishwasher




Open the dishwasher



Take out the 3 baskets and 3 drip trays and place on the worktop above the dishwasher



The grey plastic drain plug and filter cage **MUST** look like this or the water will not fill and the dishwasher will not work!

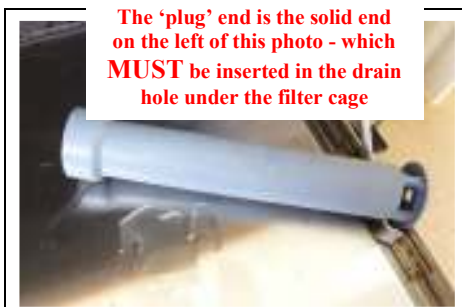

The 'plug' end is the solid end on the left of this photo - which **MUST** be inserted in the drain hole under the filter cage



The vented end of the plug **MUST** be at the top



Ensure that the filter cage is in place and that the 'plug' end is inserted and pushed right to the bottom.
Then, **CLOSE** the door – it will need a firm push.

Go to the Master Switchboard near the door and switch on the dishwasher



Press the yellow button on the left - the green light will come on.
Do **NOT** press any other buttons yet



You will now hear water filling the wash and rinse tanks



When the tanks have been filled the orange light will come on and the heating of the water begins




It will take about ~40 minutes to heat the wash water to 60°C, and the rinse water to 82°C. So, you'll need to allow this time before you plan to wash any crockery etc

When the water has been heated the orange light will go out AND there will no longer be the sound of the water heating.




Stage 1 – Preparing to use the dishwasher (contd)

Please use the following work place layout:

- *Work from left to right*
- *Place a drip tray on left near the slops sink in readiness for loading the basket*
- *Dishwasher in the middle*
- *Place a drip tray on right in readiness for the basket being taken out of the dishwasher to dry.*

		
<p>Take the dirty crockery etc to the slops sink. You MUST remove ALL debris and slops from the crockery or you could be liable for the cost of a Service Engineer being called out!</p> <p>Place the debris in the rubbish bin, and the slops down the slops sink.</p> <p>If necessary, also rinse crockery under the tap before loading the appropriate basket layout.</p>	<p>Place the basket of dirty items (only 1 basket) in dishwasher. Then, CLOSE the door – it will need a firm push.</p> <p>(If ~40 minutes haven't yet elapsed you will still hear the water heating.)</p>	<p>When the water has finished being heated the orange Boiler Temperature light will go out AND there will no longer be the sound of the water heating.</p>

Stage 2 – Using the dishwasher

		
<p>Select which cycle time you want to use (II or III minutes), by pushing & toggling the yellow button. The appropriate light will come on (II above)</p>	<p>Press the Cycle button and the orange light will go on. <u>You will hear the dishwasher in operation.</u></p> <p>You should now be preparing the next basket to be washed.</p>	<p>After 2 (or 3), minutes the orange Cycle light will go out</p>



Take the basket out of the dishwasher and place on the drip tray to the right above, and leave to dry for ~3 minutes



Place the next basket to be washed in the dishwasher and proceed as before

You will hear some of the wash water being pumped out.

You will then hear the dishwasher topping-up the rinse tank with clean water.

There might be a short period of the water being heated.

The dishwasher will then go through its cycle

Continue to proceed as before



Take the basket of dried crockery to the appropriate cupboard, unload and place items as labelled on the cupboard shelves.

After you have completed all the washing you need to do, you MUST empty all the dirty water from the dishwasher



First, remove the grey plug and temporarily place on the work top above, **but** leave the grey debris cage in place



Second, press the yellow button on the left and the GREEN LIGHT WILL GO OUT.



Despite the green light going out, you will then immediately hear the water being pumped out.

When all the water has been pumped out, the pump will stop automatically.

Open the door



Third, remove the debris cage

	 <div data-bbox="1166 78 1337 309" style="border: 1px solid black; padding: 5px; color: red; font-weight: bold;"> <p>The vented end of the plug MUST be at the top</p> </div>
<p>Take it to the sink and remove any debris from the basket and place the debris in the rubbish bin.</p> <p>Rinse the basket.</p>	<p style="text-align: center;">The following steps are very important to ensure that the dishwasher will work OK for the next Hirer</p> <p style="text-align: center;">Replace the debris basket.</p> <p>Replace the plug - taking great care to ensure that the 'solid' end is pushed right to the bottom and that the vented end is at the top.</p> <p style="text-align: center;">Firmly push the plug right down to the bottom</p>

Stage 3 – Clearing up & Cleaning up

	
<p>You MUST clean the bottom of the dishwasher with blue paper hand towel and Cif to remove grease & scum and leave the dishwasher absolutely clean for the next user.</p>	

		
<p>Wipe & dry out the inside of the dishwasher including all the corners.</p>	<p>Clean & replace the 3 drip trays at the bottom of the dishwasher.</p> <p>Replace the 3 baskets on top, with all 3 hand holds facing to the front and having placed the small cutlery basket in the top – open - wash basket</p>	



Wipe down the front of the dishwasher



Wipe dry all the worktops where you have placed the drip trays and/or baskets.



Go to the Master Switchboard and turn the Dishwasher switch off.

Now, that wasn't so bad was it?

You should have saved much time as well as washing and drying everything hygienically.
